



POWERBANK MH-DPB220LI FREQUENTLY ASKED QUESTIONS READ PRODUCT MANUAL FIRST


Q: The fourth green LED rarely illuminate. Is the battery pack not holding a charge?

The fourth green LED will remain off while the battery pack is being used. It will be lit only when you press the battery gauge button while the charger is connected. A three-LED display (red, green, green) indicates a full charge. Likewise, a one-LED (red) display indicates a low-charge.

Q: How long should I charge the battery pack?

You should charge the battery pack for no longer than 5-hours. Toward the end of the charge, the battery pack will become warm.

Q: I am confused regarding the polarity setting. Please clarify on how I should configure the "+" and "-" on the adapter plug.
For the majority of the digital cameras in the market, the adapter plug configuration is: "+" on the camera cable to "+" on the adapter plug, and "-" on the camera cable to "-" on the adapter plug. See illustration below:

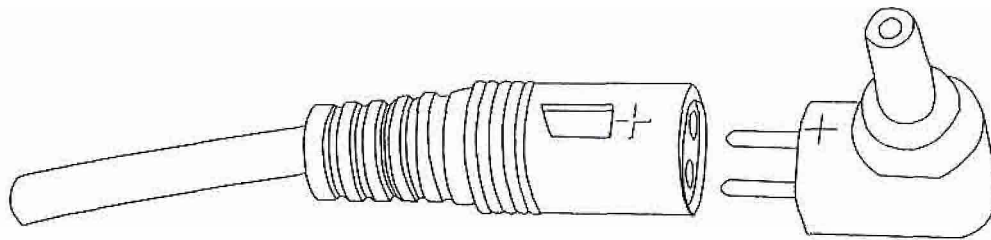

You can verify the polarity setting by double checking the following diagram located near the power input connector on your digital camera:



~~If you see this diagram (which you most likely will), follow the instructions above by matching the "+" symbol on the camera cable to the "+" symbol on the adapter plug.~~



If you see this diagram, match the "+" symbol on the camera cable to the "-" symbol on the adapter plug.

Q: The battery pack gets quite warm toward the end of the charge. Is this normal?

The battery pack will become warm towards the end of the charge. The PowerBank features an internal thermoswitch which will shut off in the event of over-temperature.

For more information, visit our web site at <http://www.mahaenergy.com/>